

# Cover Stow


## Step 1 -

Position each bracket on the back of the spa. Each Cover Stow arm should have a minimum 12" clearance from the ground. Your Cover Stow arms should be 24 to 36 inches apart depending on the width of your spa.

(It may be required for you to insert a 2" x 4" wood stud behind the spa's cabinet where the position of the Cover Stow brackets are going to be screwed onto the skirt for extra support.)

## Step 2 -

Using the #10 x 1" mounting screws, attach your Cover Stow bracket to your spa side. Place the black screw caps over the screw heads after tightening the screws.

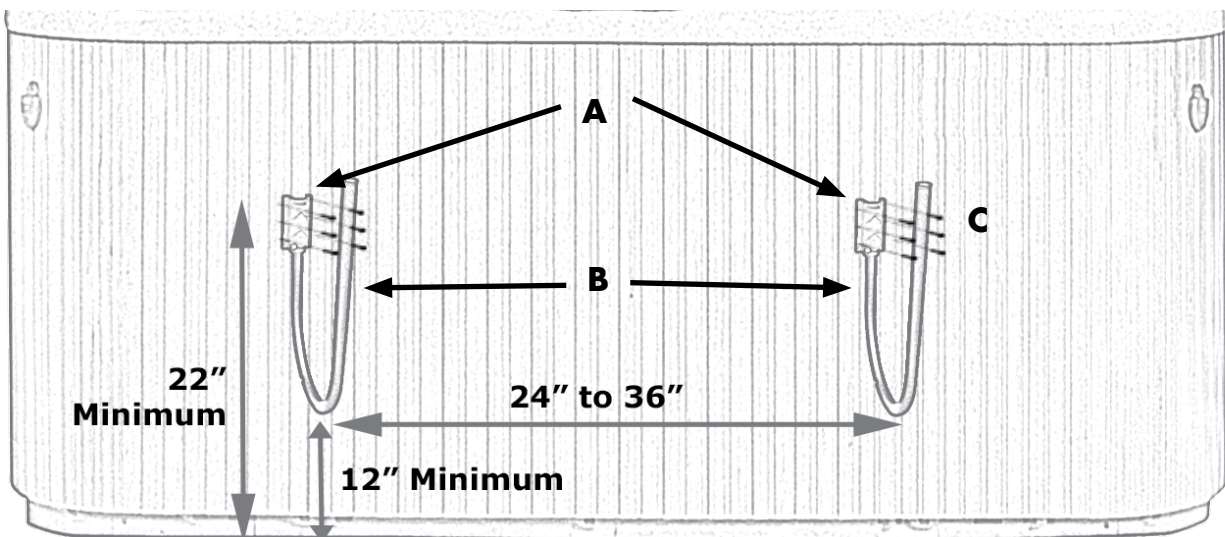

## NOTE:

It is not recommended to use the Cover Stow with a spa cover that weighs over 100 pounds.

## PARTS INCLUDED:

- A 2 Brackets**
- B 2 Arms**
- C 12 #10 x 1" Mounting Screws**
- D 12 Black Screw Caps**

# *Cover Stow*

## HOW TO USE YOUR COVER STOW

**STEP 1 - Move the Cover Stow arms to the open position.**



**STEP 2 - Fold cover.**



**STEP 3 - Lower the cover slowly into the cover arms.**



**STEP 4 - Enjoy your spa!**

